





Fixation en façade



1 Wall mounting

The fixing bar of your film blind is placed on the wall directly above the

The fixing bar may protrude slightly from the frame, the blind will have to be pulled up to allow the window to be opened.

window frame.



2 Carpentry fastening (fixed window)

The fixing bar of your film blind is screwed directly to the window frame. The fixing bar should stop at the ends of the window or door frame.



3 Mounting on sash

The fixing bar of your film blind is screwed directly to the window frame. The fixing bar should stop at the ends of the frame, the blind does not have to be pulled up to allow the window to be opened.

Advice : For more practicality in everyday life, we advise you to choose the width of your film blind, making sure that it is flush with the handle so as not to cover it.



Stores Films cuttings and options

Exact dimensions:

Order your film blinds cut to the exact millimeter. Note that the width you enter will correspond to the width of the mechanism, so the film itself will be about 5 cm less. The maximum width of the mechanism is 151 cm, so a film blind cannot be wider than 146 cm. As for the length, you can order a film blind of up to 300 cm.

The pleated effect will be very useful on large film blinds because it provides a certain rigidity that makes the film blind even more durable.

Options:

Please make sure that you specify the side of the chain and the colour of the mechanism. If you choose a film blind with a cassette, the colour of the mechanism and the cassette will be the same.

Whatever film blind you order (with or without a cassette), the installation will be done in the same way, using a fixing bar.

For more information, please consult the installation instructions.







