

## Essentials accessories



Ref. produit : **KITbat**

## 1 Prepare the installation



Tips : mix 2 soap solution's tablespoon for 0,5 L of water



### 1. Perfectly clean the windows

Spray with soapy water and use a scraper. Wipe the glass and frame with a clean and dry cloth.



### 2. Prepare the film before installation

Moisten and place the film on a larger surface (or on another window). Set the film with the liner front of you (the marking sticker front of you)



For linear meter buying : pre-cut the film, adding a 2 cm margin on each side

## 2 Set the film on the window



### 4. Split the film from the liner



Use 2 pieces of tape (not supplied) placed in a corner opposite each other to separate the 2 parts



### 5. Neutralise the glue

While you gently split off the film, profusely spray the adhesive side with soapy water



Moisten your fingers to avoid dust



### 6. Positionnez le film

Moisten with soapy water the window to be equipped. Flip the film by applying the wet side to the glass, taking it from the top



Once the film flipped, spray with soapy water for slipping the felt edge squeegee



Each films are with cardboard or transparent liner  
For anti-fog film, there are a liner on the each sides

## 3 Finish the film application



### 7. Squeegee the film


Smooth the film thanks to the squeegee from the centre to the outside, starting at the top



### 8. Recut if necessary



Use the felt edge to guide the cutter when cutting so that it doesn't touch the frame

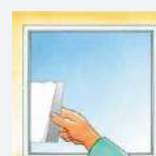

### 9. Squeegee again

Wrap the squeegee into paper towel to absorb the water left



Let dry from 3 to 4 weeks without touch-it



For outdoor installation, it is advisable to apply a neutral silicone sealant or marine-type varnish around the edge of the film to avoid possible water infiltration.  
Avoid applying your film in case of bad weather/frost etc. and ideally at a temperature above 15°C.



**The installation is complete !**

