

**Essentials
accessories**

 Ref. produit : **KITbat**

1 Prepare the installation

 *Astuce : comptez 2 cuillères à soupe de solution savonneuse pour 0,5 L d'eau*



1. Perfectly clean the windows

Spray with soapy water and use a scraper. Wipe the glass and frame with a clean and dry cloth.



2. Prepare the film before installation


Moisten and place the film on a larger surface (or on another window). Set the film with the liner front of you (the marking sticker front of you)


 *For linear meter buying : pre-cut the film, adding a 2 cm margin on each side*

2 Set the film on the window



4. Split the film from the liner


 *Use 2 pieces of tape (not supplied) placed in a corner opposite each other to separate the 2 parts*


 *Each films are with cardboard or transparent liner
For anti-fog film, there are a liner on the each sides*



5. Neutralise the glue


While you gently split off the film, profusely spray the adhesive side with soapy water

 *Moisten your fingers to avoid dust*

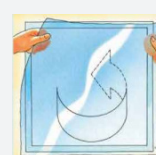


6. Positionnez le film

Moisten with soapy water the window to be equipped. Flip the film by applying the wet side to the glass, taking it from the top


 *Once the film flipped, spray with soapy water for slipping the felt edge squeegee*


3 Finish the film application

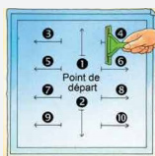


7. Squeegee the film


Smooth the film thanks to the squeegee from the centre to the outside, starting at the top

 *For outdoor installation, it is advisable to apply a neutral silicone sealant or marine-type varnish around the edge of the film to avoid possible water infiltration.
Avoid applying your film in case of bad weather/frost etc. and ideally at a temperature above 15°C.*

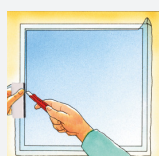


8. Recut if necessary

 *Use the felt edge to guide the cutter when cutting so that it doesn't touch the frame*

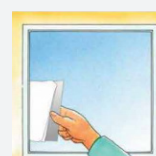

9. Squeegee again

Wrap the squeegee into paper towel to absorb the water left

 *Let dry from 3 to 4 weeks without touch-it*

 **The installation is complete !**

