



**i** **Precautions:** The application is done on the frame of the glass (never put directly on the glass). For the dimensions, take 3 cm more than the glass in width and height.


### 1 Preparing the film

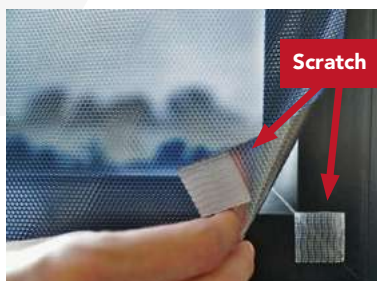

Apply scratch pads to the corners and edges of the film.

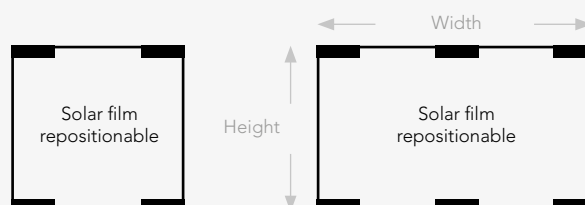

### 2 Remove the protective layer from the film

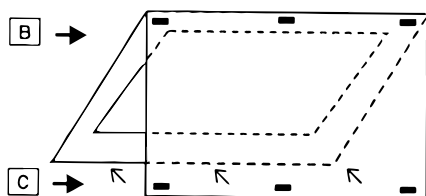

Remove the scratch guard from the top of the film and carefully apply it to the top of the frame [B]. Then do the same on the lower part [C].

### 2 Finish the installation

If necessary, unclip one or more scratch strips to adjust the film so that it does not ripple. The film should be as tight as possible.

#### Advice Luminis Films

- For vertical walls: put a scratch every 50 cm.
- For sloping walls (e.g. veranda roofs or velux windows): put a scratch every 30 cm.

Apply the scratches to the film and allow the adhesive to cure for at least 24 hours on the substrate before hanging the film.

 **The installation is complete !**

